

Bike Rack Installation Instructions Cora Bike Rack - E3VR-P (for mounting E3VR-DYN Racks)

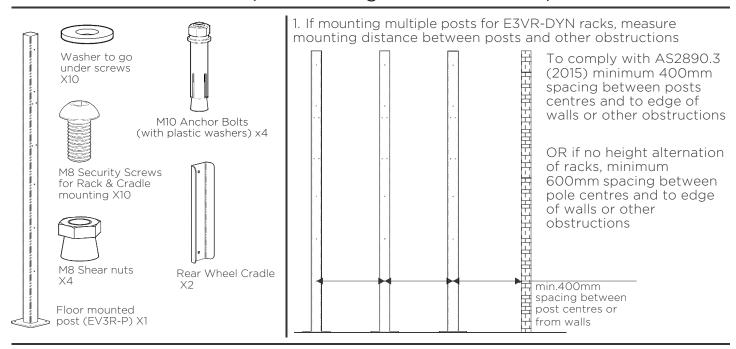

2. Drill holes in floor for location of anchor bolts

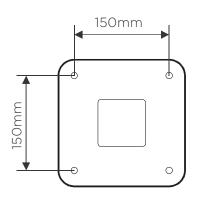


- Use dimensions above for anchor bolt drill hole locations
- Drill or core hole 10mm diameter and 75mm min. depth

4. E3VR-DYN mounting

- There are upper and lower mounting positions on each post.
- Use only the post mounting fixings included with the E3VR-P post
 Do not use the wall mount fixings
- Do not use the wall mount fixings included with each E3VR-DYN, but keep the security screw tool bit.
- NOTE: The E3VR-P includes fixings and rear wheel cradles for use on both sides of post. You may only require fixings and rear wheel tray for single sided use.


3. Fix post to floor

- Locate post in position
- Insert four (x4) anchor bolts into holes. Ensure plastic washer is firmly against the base plate, and metal washer is between the plastic washer and nut.
- Tighten anchor bolts with standard supplied nut

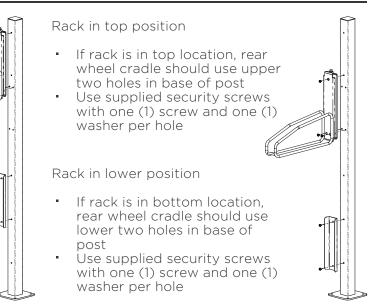


Bike Rack Installation Instructions Cora Bike Rack - E3VR-P (for mounting E3VR-DYN Racks)

5. Rack positions on post, for single or multiple post

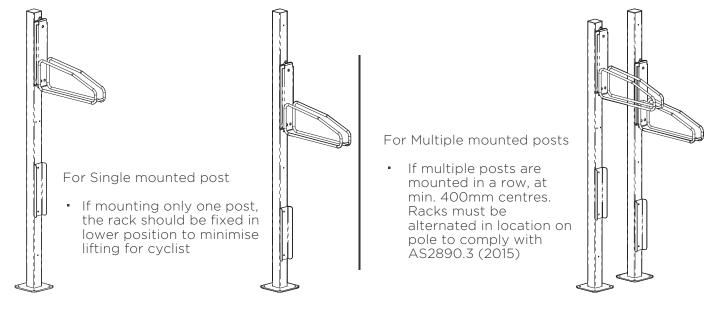


6. Dual sided mounting of racks to post

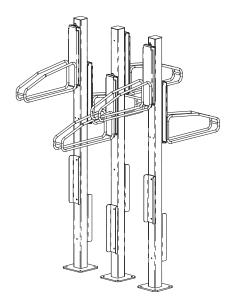

Dual sided mounting of racks to post

- Racks can be mounted to both sides of post
- For multiple post installations, rack locations on post should be alternated, on both sides of post

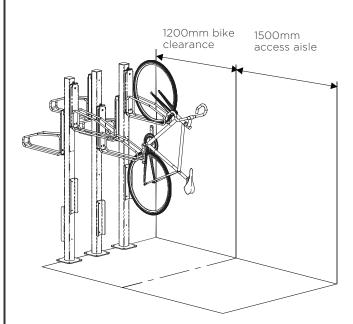

7. Access and clearance around mounted racks

Access dimensions around posts and racks

- Posts are to be mounted with minimum clearance zones from any side a rack is mounted.
- Min. 1200mm from post for bike clearance, min. 1500mm additional for access aisle.





PH 1800 249 878

sales@cora.com.au www.cora.com.au