


## Cora Bike Rack - Scooter Rack Series Single Sided Rack (SRS)


This instruction sheet is to be used for SRS - Scooter 'Single' sided racks

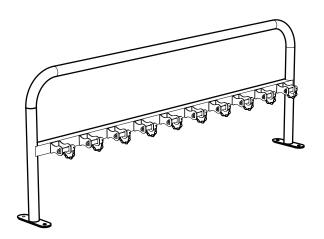

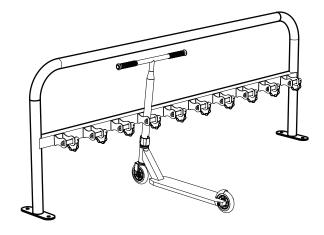

#### Components for Scooter Rack used in assembly

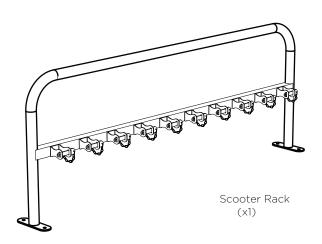

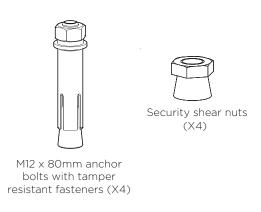

#### 1. Site selection

When selecting a site for your new scooter rack, the most important advice is - do not try to hide it, as it will not be used! Suitable locations include;


- Adjacent to entrance doors and in line of sight of a window
- Near high pedestrian traffic
- A flat location at the same surface level which cyclists use for access
- Covered areas


#### Other things to remember;

- Where a rack is being installed at an existing location, the rack should be placed where scooters are currently parked
- When using a garage location, it is recommended to use a parking bay that is adjacent to an end wall nearest to an entrance door.

Cora Bike Rack - Scooter Rack Series Single Sided Rack (SRS)

2. Access and clearance - single sided rack

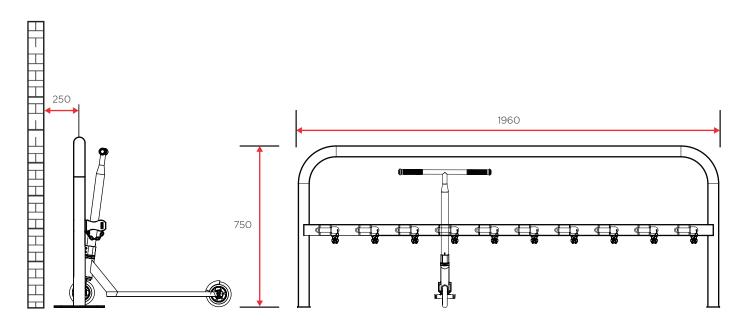

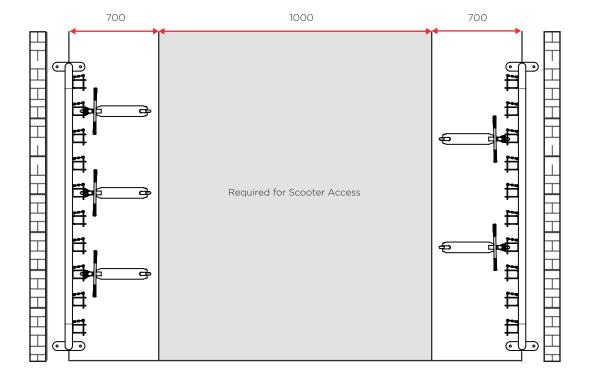


#### Access dimensions around racks

- Before mounting rack, find a suitable place that will allow for minimum spacing dimensions
- Ensure minimum spacing from walls, other racks or obstructions to allow for minimum access

## Cora Bike Rack - Scooter Rack Series Single Sided Rack (SRS)

### 3. Scooter rack fixings

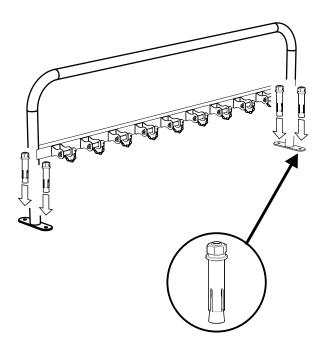


- Use the anchor bolts included
- Place rack in the desired location, ensuring correct clearance on all sides
- Place an 8mm drill through the 4 footing holes to mark the correct position
- Remove rack and drill an 75mm deep hole into the concrete using a standard hammer drill. Repeat using a 12mm drill. Clear holes of dust

Do not drill over plumbing and/or electrical conduits, or through waterproof membranes that may be located just below surface level.

 Place rack back into correct position, place the flat washers and standard nut on to the Anchor bolts, and hammer the Anchor bolts into place. Tighten nuts firmly


#### 4. Adding the security nuts

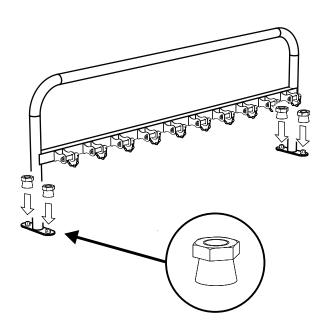

- To use the included security shear head nuts, carefully remove the tightened standard nuts, leaving the flat washers in place
- Screw on the new security nuts with the wide round base at the bottom
- Tighten the security nut firmly, and keep tightening until the top half of the nut snaps off
- Remove the top half of the Security Nut and discard. The lower half remains in place to provide an effective tamper resistant fixing

Cora Bike Rack - Scooter Rack Series Single Sided Rack (SRS)

5. Installation complete

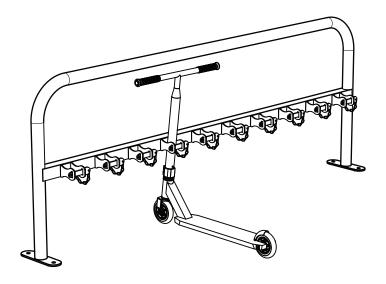

Installation of the single sided scooter rack is now complete.











PH 1800 249 878

sales@cora.com.au www.cora.com.au