

### Locker Installation & Assembly Instructions

Cora Bike Rack - Double Door Bike Locker (CBL2-HD)

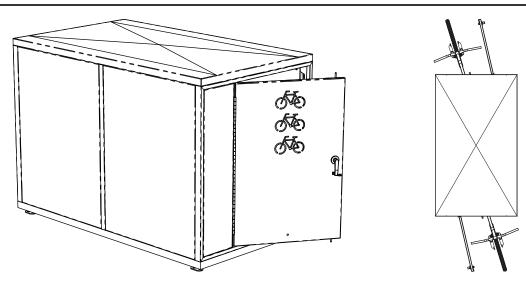


Cora - Double Door Bike Locker - Heavy Duty

Components for Double Bike Locker used in assembly

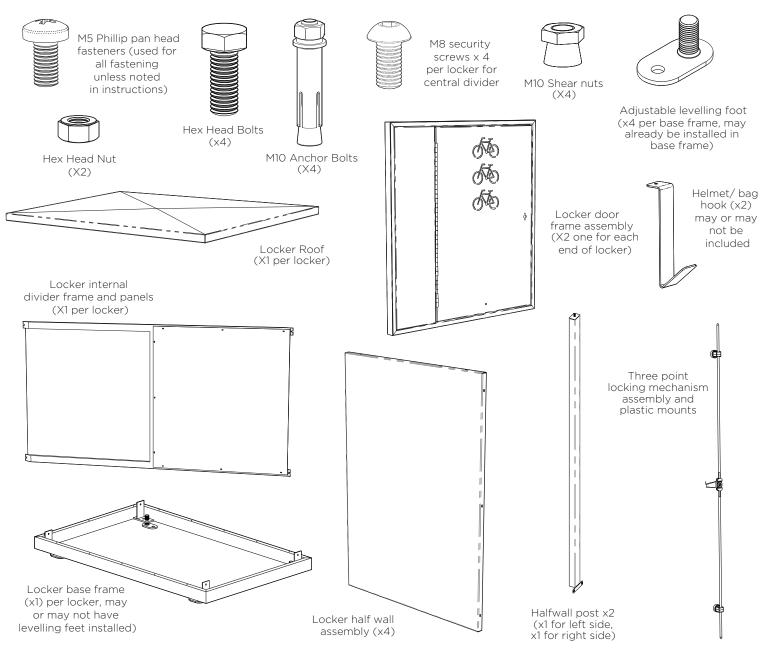


Cora Bike Rack - Australia's Bike Parking Experts - WWW.CORA.COM.AU - PH 1800 249 878

#### 1. Access and clearance around mounted lockers

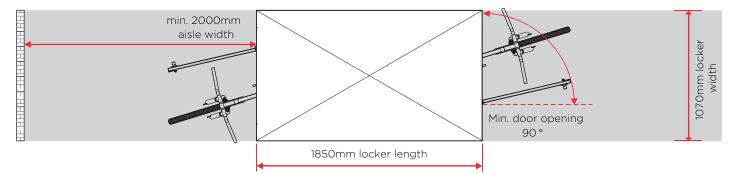


#### Access dimensions around lockers

- Before mounting locker, find a suitable place that will allow for minimum spacing dimensions
- Ensure min distance of 2000mm is provided on door side of lockers to provide correct aisle space and access for bike
- Ensure minimum spacing from walls, lockers or obstructions to allow for minimum access In multiple locker instal, lockers may be mounted side by side with no gap

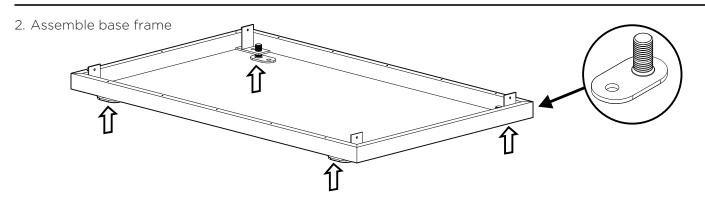


- Base frame should have one (x1) adjustable levelling foot per corner. Base frame may come with these already installed
- If base frame does not have adjustable levelling feet installed, screw in one foot per corner of frame. Feet to be screwed in from bottom of frame
- 3. Level base frame on ground at intal location

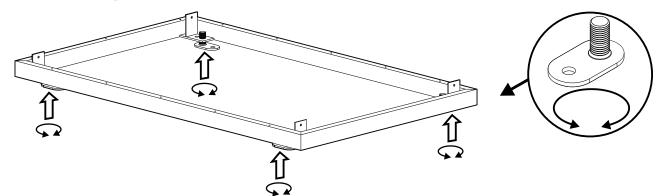


- Try to use an instal location where ground is already as flat and as unobstructed as possible (areas without bumps, dips, raised sections from roots or ground features).
- Ground type should be solid eg.: concrete, asphalt, bitumen etc.
- Level base frame by raising/ lowering corners by screwing adjustable feet in and out.
- Feet have a limited range of travel and may not accommodate all surfaces, levels or gradients
- Use spirit-level placed on top of frame, to assist in getting frame as level as possible.

# NOTE: Ensure all feet contact with ground firmly after levelling, frame cannot rock or lean at any corner, or when fastened with anchor bolts, frame will be warped and not level and will effect assembly of locker.


4. Position adjustable foot inside frame before fixing to ground

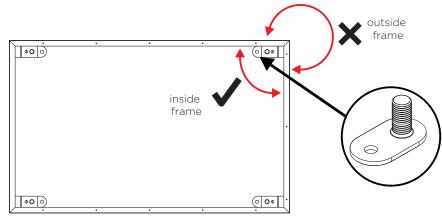

- After base frame has been levelled by adjusting corner feet, ensure foots final position is located inside structure of base frame
- Hole on adjustable foot, is to be used for anchor bolt fixing of frame to ground and cannot be located outside of frame (for security anchor bolts to be inside locker frame structure when installed).
- 5. Drill holes in ground for location of anchor bolts

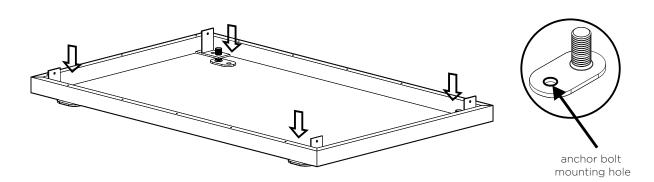

- Option 1: Leave base frame in place and drill holes for anchor bolts directly trough hole in adjustable levelling feet.
- Option 2: Use holes in adjustable levelling feet to mark location of holes for anchor bolts. Mark holes while base frame is in correct position. Move frame away and drill holes
- Drill or core a hole using a 12mm diameter drill bit to 75mm min. depth
- 6. Install Anchor bolts, fix base frame to ground

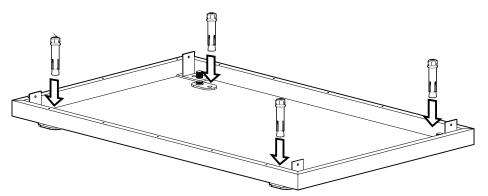





After Anchor bolt install


- Locate frame in position with holes in adjustable feet, over drilled holes in ground, knock anchor bolts (x4 one for each corner of frame) into ground through holes in adjustable feet.
- Check level of frame.
- Tighten anchor bolts with standard supplied nut
- After anchor bolt nut is tightened fully, install supplied shear nuts (x4 one per anchor bolt) onto top of thread
- Tighten shear nuts until head snaps off


7. Attach two (2x) door assemblies to base frame

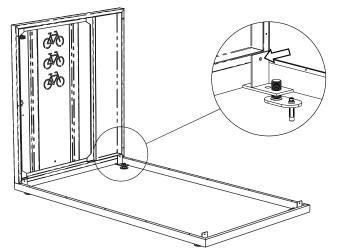

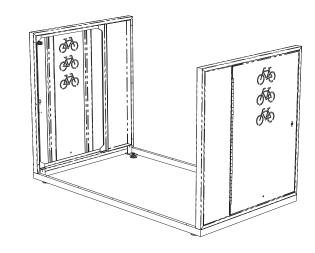


- Screw door assembly to base frame using two (x2) Phillips head screws.
- Each door assembly is fixed to ends of base frame, using outside tabs on ends of base frame
- 8. Attach halfwall posts and side panels to base frame and door frames

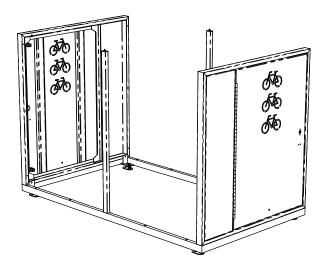

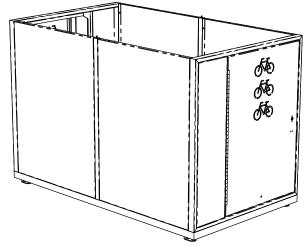


- Screw one post to middle of each side of the base. (using two Hex head bolts per side) Posts are mounted resting on top of the base frame.
- Screw x4 side panels (two for each side of locker). Side panels will attach to base frame, end frames and posts using M5 pan head screws.
- 9. Attach roof to locker

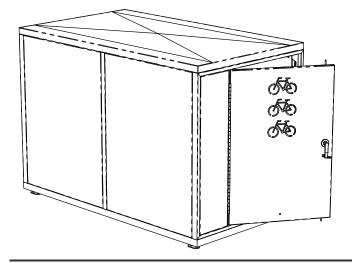


- Roof is fixed via screwing from inside of locker, through frames of both side panels, door panels and hallfwall posts into roof;
  - Side panels to roof M5 pan head screws
  - Door assembly to roof M5 CSK head screws
  - Hallfwall posts to roof Hex head bolts

10. Install internal bike divider frame and panels

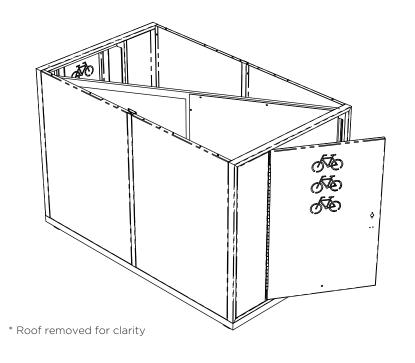


- Locker bike divider frame is fixed on angle to inside of locker using a total of four (x4) M8 Hex head bolts.
- Divider frame is fixed using two screws to each end of frame, fixing top and bottom of divider frame to door assembly frame
- Two flat sheet panels are fixed to divider frame using M5x12 Pan head screws, done either before or after frame is installed inside locker

11. Install 3 point locking mechanism

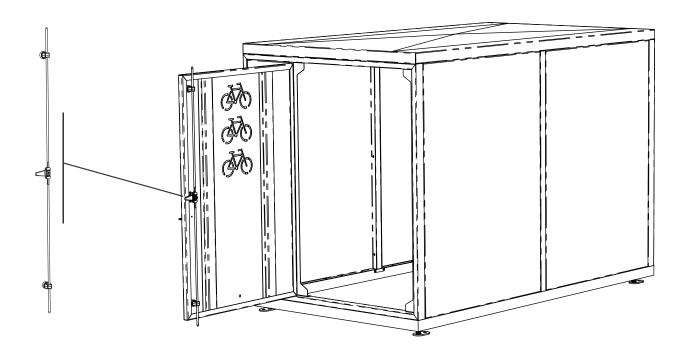


- One 3-point locking mechanism per door
- Mechanism is installed over threaded shaft of handle and secured by tightening supplied nut
- Position of main lock paw should be tuned so not to clash with door, but close door tightly.
- Two (x2) rod guides should also be screwed to inside face of each door
- Ensure rod guides are positioned to allow lock rods to travel freely without hitting inside or edges of door

12. Attach helmet/ bag hook. One at each end (if supplied)

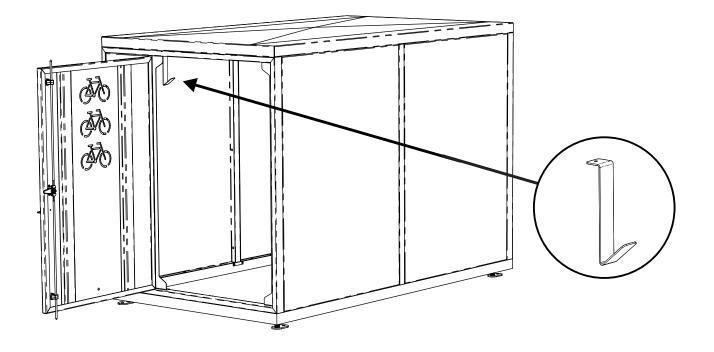

Installation of the Cora Double door locker is complete

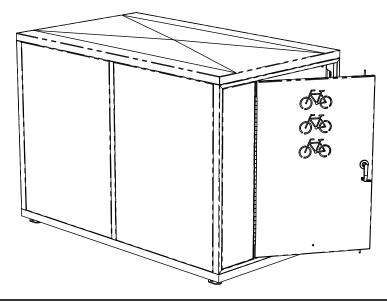





## PH 1800 249 878

sales@cora.com.au www.cora.com.au